# **TR-76G**

# **RF Transceiver Module Series**

# **Data Sheet**

# Preliminary





# Description

TR-76G is a family of IQRF transceiver modules operating in the 868 MHz and 916 MHz license free ISM (Industry, Scientific and Medical) frequency band. Its highly integrated ready-to-use design containing MCU, RF circuitry, serial EEPROM and optional on-board antenna requires no external components. SMT mounting and very small dimensions allow space saving. Ultra low power consumption fits for battery powered applications. Flexible MCU pins enable extended functionality and simpler application circuitry and PCB. Extended MCU memories include built-in operating system which significantly reduces applications even without programming.

# **Key features**


- Operating system (upgradeable at the user), easy to use
- DPA framework for for Mesh network applications
- GFSK modulation
- Selectable RF band 868 / 916 MHz, multiple channel
- RF output power 10 mW (10 dBm) with antenna connector
- Effective radiated power 1.6 mW (2 dBm) with on-board antenna
- MCU with significantly extended memories for program and data
- Extended MCU resources (interrupt capability and programmable internal pull-ups on all I/O pins, remappable digital peripherals, ...)
- Extra low power consumption, power management modes
- SPI interface supported by OS in background
- Serial EEPROM 256 Kb
- Multiple PWM output
- Extended programmable HW timer options
- Battery monitoring
- 18 pins, 11 I/O pins, 1 input only pin
- A/D converter (multiple channels), D/A converter, and analog comparator
- Options: on-board antenna or soldering antenna pad
- Stamp-hole pads, SMT mounting, compatible with SIM card connector without metallic holder (KON-SIM-02)
- Shielding can

# **Block diagram**



# Applications

- Bidirectional RF communication
- Point-to-point or network wireless connectivity
- Telemetry, AMR (automatic meter reading)
- WSN (wireless sensor network)
- Building automation
- Street lighting control
- Wireless monitoring, control and regulation
- Remote data acquisition
- RF connectivity in many other fields
- Also for municipal and indoor areas
- Internet of Things

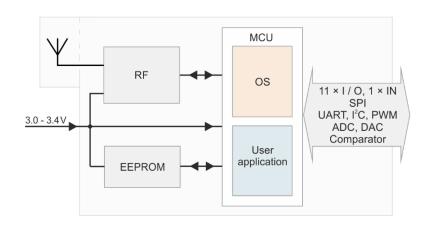



The information contained in this publication regarding device applications and the like is provided only for your convenience and may be superseded by updates. It is your responsibility to ensure that your application meets your specifications.

IQRF Tech MAKES NO REPRESENTATIONS OR WARRANTIES OF ANY KIND TO STATED CONDITION, QUALITY, PERFORMANCE, MERCHANTABILITY OR FITNESS FOR PURPOSE and disclaims all liability arising from this information and its use. Use of IQRF Tech devices in life support and/or safety applications is entirely at the buyer's risk, and the buyer agrees to defend, indemnify and hold harmless IQRF Tech from any and all damages, claims, suits, or expenses resulting from such use. No licenses are conveyed, implicitly or otherwise, under any IQRF Tech intellectual property rights.

### **Technical specifications**

Typical values unless otherwise stated

Parameters specified in this datasheet are typical values. They are at power supply  $V_{CC} = 3 \text{ V}$  only.  $V_{CC}$  voltage different from 3 V can impact on RF range and other parameters.

Supply voltage (V <sub>CC</sub> ) <sup>1</sup>	3.0 V min., 3.4 V max., stabilized
Operating temperature <sup>2</sup>	-40 °C to +85 °C
Supply current	
Deep sleep mode Sleep mode	< 300 nA (all peripherals disabled <sup>4</sup> , RF IC in Standby mode) < 1 µA (all peripherals disabled <sup>4</sup> , RF IC in Sleep mode)
Run mode RF sleep RF ready	1.8 mA 3.3 mA
RX mode STD LP <sup>5</sup> XLP <sup>5</sup>	12.5 mA 190 μA 13 μA
TX mode	8 mA – 25 mA (according to RF output power)
RF band RF channels RF data modulation RF data transmission bit rate	868 MHz or 916 MHz (software configurable) See IQRF OS User's guide, Appendix <i>Channel maps</i> GFSK (Gaussian Frequency Shift Keying) 19.8 kb/s
RF receiver category RF sensitivity	1.5 (according to ETSI EN 300 220-1 V3.1.1) -103 dBm <sup>6A</sup> , -94 dBm <sup>6B</sup> , (STD RX mode, checkRF(0)). See <i>Diagram 3</i> .
RF output power <sup>6A</sup> Effective radiated power <sup>6B</sup> RF interface <sup>6A</sup>	Up to 10 dBm (for 50 $\Omega$ load), programmable in 8 levels (0 – 7). Up to 2.0 dBm (868 MHz band), 0.0 to 2.0 dBm (916 MHz band). See <i>Table 1.</i> Single-ended, output impedance 50 $\Omega$
Antenna 6B	PCB meander line, linear polarization, omnidirectional. See Diagram 1.
RF range <sup>3, 6B</sup>	500 m
Input voltage on Q4 to Q15 pins	0 V to VCC
A/D converter	10 bit, multiple inputs. Refer to MCU datasheet.
Size (L x W x H)	15.2 mm x 14.9 mm x 3.3 mm (TR-76G) 23.3 mm x 14.9 mm x 3.3 mm (TR-76GA) Tomporature 116 °C to 124 °C relative humidity 65 % max, chemically indifferent
Storage environment	Temperature +16 °C to +24 °C, relative humidity 65 % max., chemically indifferent

Note 1: RF power and other parameters depend on the supply voltage. Refer to datasheets of MCU and RF IC used. Test your application with respect to the required supply voltage range.

**Note 2:** RF range may change with lower temperature. Frost, condensation, or humidity over 85% may disable module functionality. Module suitability should be tested in the final application under real conditions before volume use.

**Note 3:** Since the radiated power and the RF sensitivity of the TR-76G(A) and TR-72G(A) are the same, under the same installation conditions the TR-76G(A) has the same RF range as the TR-72G(A).

Note 4: Additional current is consumed when a peripheral (e.g. watchdog, Brown-out detection, etc.) is enabled.

Note 5: Depends on interferences.

Note 6: 6A: For TR types without a built-in antenna.

6B: For TR types with built-in antenna.



### Absolute maximum ratings


Stresses above listed maximum values may cause permanent damage to the device and affect device reliability. Functional operation under these or any other conditions beyond those specified is not supported.

Supply voltage (V<sub>CC</sub>) Voltage on Q4 to Q15 pins (configured as inputs) vs. GND Storage temperature Ambient temperature under bias 3.9 V -0.3 V to (V<sub>CC</sub> + 0.3 V) -40 °C to +85 °C -40 °C to +85 °C

Caution: Electrostatic sensitive device. Observe appropriate precautions for handling.

See the application note AN015 - IQRF HW design.

# Simplified circuit diagram

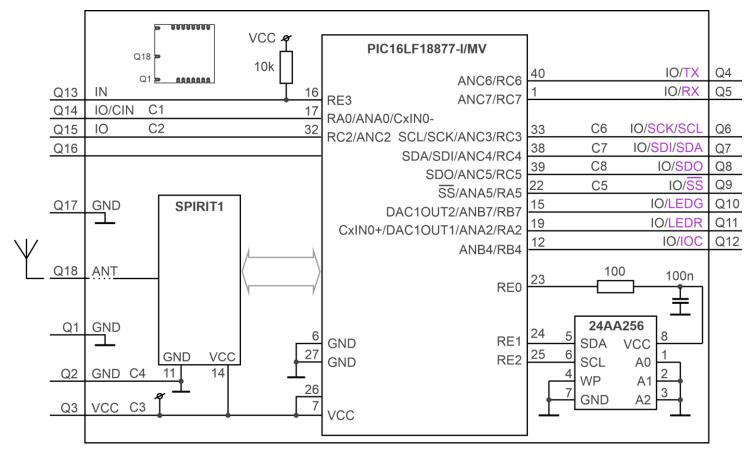

Digital peripherals marked in purple are used by IQRF OS and DPA. Therefore, they must not be remapped by PPS.

#### **Basic components**

IC	Туре	Manufacturer	Note
MCU	PIC16LF18877–I/MV	Microchip	
RF IC	SPIRIT1	STMicroelectronics	
RF balun	BALF-SPI-01D3	STMicroelectronics	
EEPROM	24AA256-I/CS16K	Microchip	256 Kb

For more information refer to the datasheets of ICs used.



# **TR-76G**

Pin I	Name	Description		
Q11	GND	Ground	Top view	
Q2, C4	GND	Ground	-	5
Q3, C3	Vcc	Power supply voltage	015 013 013 013 015 015 015 015 015 015 015 015 015 015	ဂိုဂို
Q4	IO / TX RC6 TX ANC6	General I/O pin UART TX Analog A/D input		
Q5	IO / RX RC7 RX ANC7	General I/O pin UART RX Analog A/D input		
Q6, C6	IO / SCK / RC3 SCK SCL ANC3	SCL General I/O pin SPI clock input I <sup>2</sup> C clock Analog A/D input	Q18 🏊	
Q7 <sup>2</sup> , C7	IO / SDI / S RC4 SDI SDA ANC4	SDA General I/O pin SPI data input I <sup>2</sup> C data Analog A/D input	Q1 <b>D AAAAA</b> 2 8 8 8 8 6	<b>A</b> 8 8
Q8 <sup>2</sup> , C8	IO / SDO		Bottom view	
QU , UU	RC5 SDO ANC5	General I/O pin SPI data output Analog A/D input		
Q9, C5	<b>IO / -SS</b> RA5 ANA5 -SS	General I/O pin Analog A/D input SPI Slave select		25
Q10 <sup>3</sup>	RB7	/ <b>DACOUT</b> General I/O pin JT2 D/A converter output LEDG supported by IQRF OS and DPA		26 27 •••
Q11 <sup>3</sup>	RA2	/ DACOUT / CIN General I/O pin JT1 D/A converter output Comparator +input LEDR supported by IQRF OS and DPA		8
Q12	IO / ADC RB4 ANB4	General I/O pin	by IQRF OS and DPA. RFPGM / (X)LP mode termina	ation.
Q13	IN RE3	General input only pin		
Q14, C1	IO / C-IN RA0 ANA0 CxIN0-	General I/O pin Analog A/D input Comparator –input		
Q15, C2	IO RC2 ANC2	General I/O pin Analog A/D input		
Q16	-	Do not use, leave unconnected		
Q17 <sup>1</sup>	GND	Ground		
Q181	ANT	Antenna		
P1-P5	For manufa	acturer only		



All MCU pins connected to TR I/O pins (Q2 to Q15) are equipped with the interrupt on change capability (except Q13), programmable pull-up resistor, and (except Q13) can be used as analog inputs for A/D converter.

All MCU pins dedicated to internal digital peripherals (e.g. UART, I<sup>2</sup>C, SPI, PWM, timers, analog comparator output, etc.) are remappable in SW. See the MCU datasheet, chapter Peripheral Pin Select (PPS). The list above denotes only the pins assigned to UART, I2C, and SPI by default. Other remappable peripherals (e.g. PWM or analog comparator output) are not denoted there.

- Not implemented for TR-76GA. Note 1:
- Pin Q8 is used as output and pin Q7 as input during the initial approximately 200 ms boot-up (after TR reset) to detect a possible Note 2: request to enter the programming mode (PGM - wired upload via SPI). After reset, the OS generates a determinate sequence on the Q8 pin. If this sequence is copied to the Q7, the OS jumps to the PGM bootloader. (The PGM mode is indicated by short red LED flashing every 2 s.)

This must be taken into account to avoid collisions with application circuitry connected to these pins. The Q7 pin must not be interconnected to Q8 or left unconnected or without a defined level on its input. This level must be arranged by application hardware. If the application circuitry ensures no such level, a pulldown resistor on the Q7 pin must be used otherwise a cross-talk between Q8 and Q7 may cause an unintentional switching to PGM.




Note 3: This pin is affected by IQRF OS (and possibly DPA) LED functions and system LED indication.

There are no on-board protection series resistors on I/O pins. It is recommended to use 200  $\Omega$  series resistors on each pin. See the application note AN015 - IQRF HW design.

# RF

Recommended circuit for development

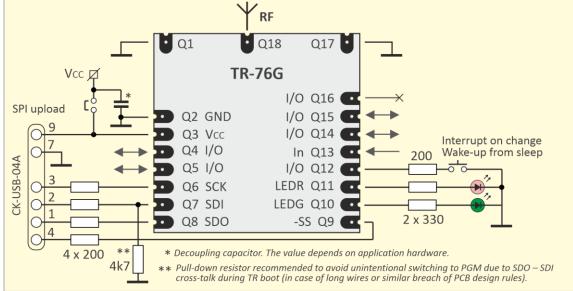

For development, it is recommended to implement the following arrangement:

- Decoupling capacitor on V<sub>CC</sub> to filter the supply voltage. The type and the value should be selected with respect to general rules observed in electronic design, according to the given application hardware and power source.
- Serial protective resistors on each I/O pin used.
- Both system LEDs (LEDR and LEDG) for IQRF OS and DPA status indication and possible user indication. When the Q10 and Q11 pins are used as user I/Os, it must be taken into account that these pins can be affected by IQRF OS or DPA.
- Pin Q12 configured as an input with the internal pull-up resistor and equipped with a pushbutton connected to the ground. Then pressing the button can generate an interrupt on pin change, wake-up the transceiver from sleep, terminate RFPGM mode, initiate bonding, etc.
- Pull-down resistor on pin Q7 recommended to avoid unintentional switching to PGM mode due to SDO SDI cross-talk during TR boot.
- SPI interface for wired upload of application code into the transceiver using an IQRF programmer, e.g CK-USB-04A.

Depending on the actual user application and power supply range, it may be required to isolate interface pins and/or power supply from user circuitry during uploading. For details refer to the CK-USB-04A User's guide, chapter Application/In-circuit upload.




# **RF** range

RF range strongly depends on the following design aspects:


- Hardware:
  - Construction of the devices (especially TR location within the device, PCB layout, ground planes, conductive areas and bulk objects such as metallic parts and batteries in the nearest surroundings, with respect to possible reflections and counterpoise effect). To achieve an efficient range and reliable connectivity, no parts impacting the range must be placed close to the built-in meander antenna. Even non-conductive parts including a mainboard PCB under the antenna can significantly impact the range.
  - Physical arrangement of devices (especially mutual orientations of antennas with respect to polarization and radiation patterns)
- Application software:
  - RF output power is selectable from 8 levels
  - To increase immunity to RF noise, incoming RF signals can be filtered according to signal strength.

Refer to IQRF OS Reference guide, function checkRF, and Application note AN014 - RF range.

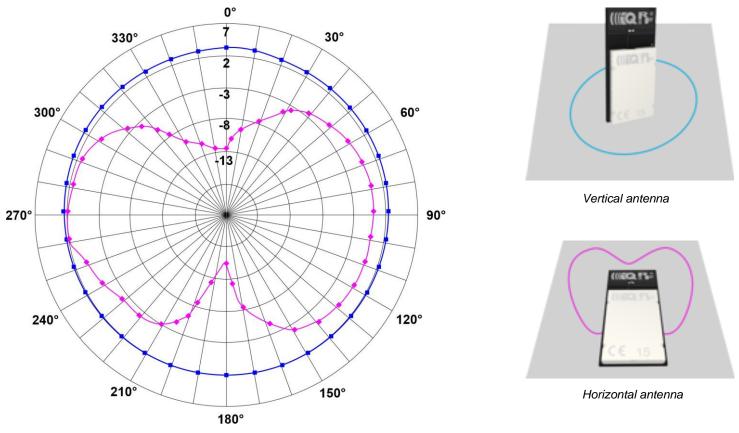



Examples of the correct and incorrect arrangement of TR-7xGA pairs:

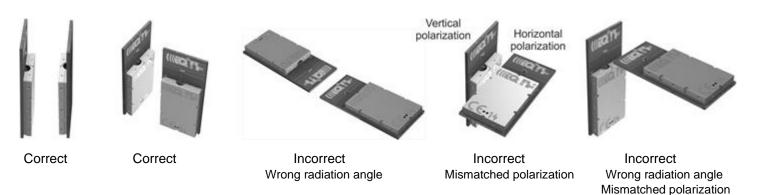

The **Effective radiated power** (ERP) in the 868 MHz band is constant for all channels. The ERP in the 916 MHz band decreases to higher channels. The ERP drop on channel 255 relative to the power on channel 0 is 2 dBm.

	ERP [dBm]			
level	868 MHz	916 MHz		
	Channels 0 to 67	Channel 0	Channel 104	Channel 255
7	2	2	1	0
6	-1	-1	-2	-3
5	-6	-6	-7	-8
4	-10	-10	-11	-12
3	-16	-16	-17	-18
2	-22	-22	-23	-24
1	-34	-34	-35	-36
0	-42	-42	-43	-44

 Table 1: TR-76GA effective radiated power (ERP) vs. level in the setRFpower (level) function.

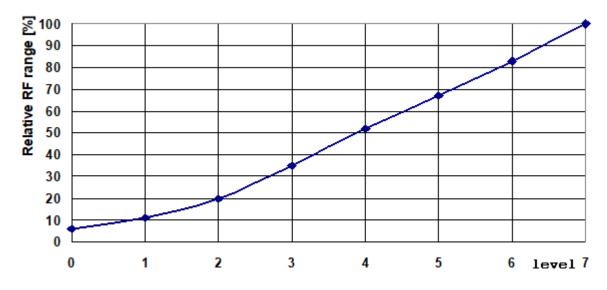


Diagram 2: TR-76G(A) relative RF range vs. level in the setRFpower(level) function.

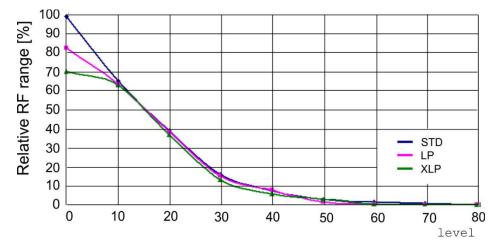
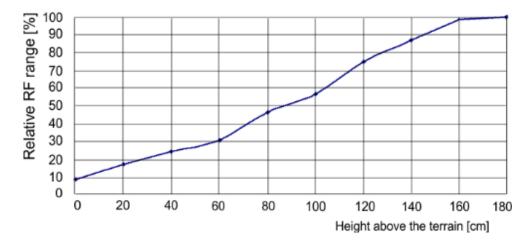


Diagram 3: Relative RF range vs. level in the checkRF (level) function in STD, LP, and XLP RX modes.

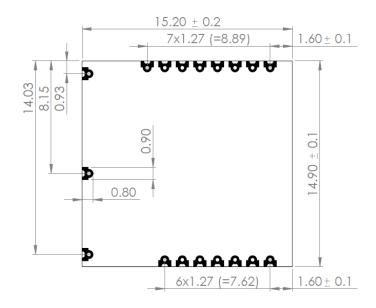


*Diagram 4:* TR-76GA relative RF range vs. antenna height above the ground, 868 MHz and 916 MHz bands.




# **Mechanical drawings**

TR-76G



#### TR-76GA

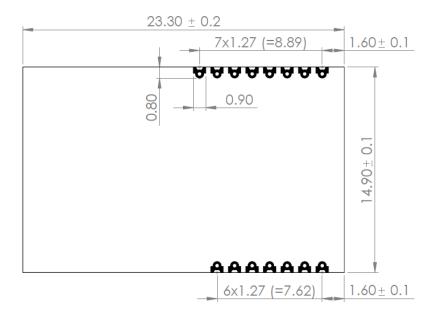

Top view. Units: mm.

# Hardware revision

TR-76G(A) v2.00 First release.



# Application

Users have to ensure observing local provisions and restrictions relating to the use of short-range devices **by software**, e.g. the CEPT ERC/REC 70-03 Recommendation and subsequent amendments in EU.


See the IQRF video tutorial set and the Application note AN015 - IQRF HW design.

#### Assembly

For proper mounting of surface mount TR modules and avoiding damage during solder reflow assembly, refer to the reflow profile and other details in the Application note AN015 - IQRF HW design, chapter SMT mounting.

It is not allowed to connect wires to pads C1 to C8 and P1 to P5 by soldering.

Caution: TR-76Gx must not be plugged into a SIM connector with the metallic holder.

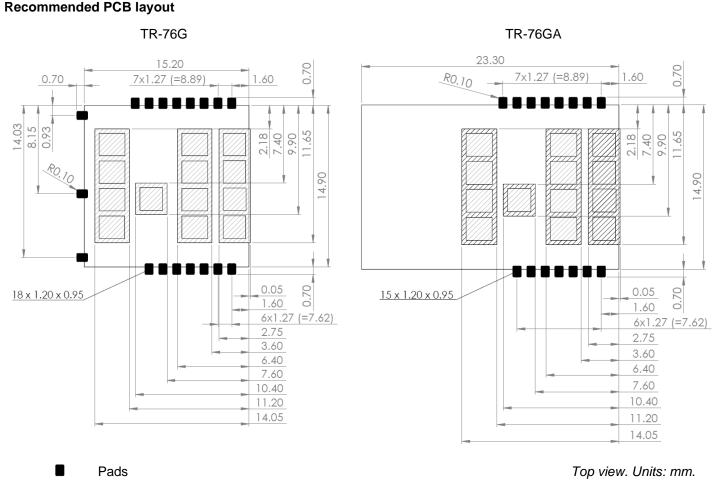



Restricted areas for wires on the top side

These patterns are for reference purposes only. Consult your producer to ensure that its manufacturing guidelines are met.



#### Sealing

In case of sealing or protecting TR modules against a harsh environment by coating, encapsulating, or potting using a lacquer, gel, or other filling matter, refer to the *Application note AN015 - IQRF HW design*, chapter *Sealing*.

#### **Operating system**

See IQRF OS User's guide and IQRF OS Reference guide.

#### **DPA framework**

See DPA Framework technical guide.

#### Application software

See IQRF Quick start guide and IQRF application examples.

#### **Programming (upload)**

There are the following possibilities to upload an application program in TR-76Gx modules:

- Wired upload with TR-76Gx plugged via the SIM connector in the CK-USB-04A programmer.
- For TR-76Gx modules populated in an application:
- Wired upload
  - Using the CK-USB-04A programmer. See the CK-USB-04A User's guide.
  - Using the CK-USB-04 programmer and the KON-TR-01P adapter. See the KON-TR-01P User's guide.
  - Completely arranged by the user application. See the IQRF SPI Technical guide, chapter Programming mode.
- Wireless upload: See the IQRF OS User's guide, Appendix RFPGM RF programming<sup>™</sup>.



# **Product information**

# **Ordering codes**

<u>R-76G A</u>
Antenna options
nil - soldering stamp-hole (no antenna, no U.FL connector)
A - PCB antenna
Transceiver series.

Type Antenna connection	
TR-76G	Soldering stamp-hole
TR-76GA	PCB antenna



TR-76G

TR-76GA

# **Document history**

- 230519 The pull-up resistor value on the -MCLR MCU pin is specified in *Simplified circuit diagram*. The description of pins on page 5 is slightly extended.
- 221118 Bug in *Table 1* fixed.
- 220929 Bug in chapter *Hardware revision* fixed.
- 220718 First release.



(F

# **Sales and Service**

# **Corporate office**

IQRF Tech s.r.o., Prumyslova 1275, 506 01 Jicin, Czech Republic, EU Tel: +420 493 538 125, Fax: +420 493 538 126, www.iqrf.tech E-mail (commercial matters): sales@iqrf.org

# **Technology and development**

www.iqrf.org
E-mail (technical matters): support@iqrf.org

# Partners and distribution

www.iqrf.org/partners

### **Quality management**

ISO 9001 : 2016 certified

Complies with ETSI directives EN 301 489-1 V1.9.2:2011, EN 301 489-3 V1.6.1:2013, EN 300 220-1 V3.1.1:2017, EN 300 220-2 V3.2.1:2018 and ERC Recommendation 70-03 (2017) and VO-R/10/05.2014-3.

Complies with directives 2011/65/EU (RoHS) and 2012/19/EU (WEEE).

# Trademarks

The IQRF name and logo are registered trademarks of IQRF Tech s.r.o. All other trademarks mentioned herein are property of their respective owners.

#### Legal

All information contained in this publication is intended through suggestion only and may be superseded by updates without prior notice. No representation or warranty is given and no liability is assumed by IQRF Tech s.r.o. with respect to the accuracy or use of such information.

Without written permission, it is not allowed to copy or reproduce this information, even partially.

No licenses are conveyed, implicitly or otherwise, under any intellectual property rights.

The IQRF® products utilize several patents (CZ, EU, US).

# Online support: support@iqrf.org

